



P.O. Box 2316  
Hollister CA 95024-2316

## **FIELD CHANGING OF WASTE MASTER NOZZLE SWIVEL**

- 1. At the swivel nozzle interface, drive two pins out (drive toward operating lever)**
- 2. Remove swivel from nozzle.**
- 3. Make sure end seal is in place (FLAT END IN GROOVE).**
- 4. Coat with Dow Corning 111.**
- 5. Place swivel in nozzle.**
- 6. Drive pins back into place. Install from operating lever side, KNURLED END LAST.**



**Pins Out Grey Handle Down**

**Pins In Grey Handle Up**



**Questions? Please call us BEFORE you attempt to do this, we can help  
Make this uneventful. 877 787 8833 Toll Free**